



INSTRUCTIONS

94100500

2024-01-23



MINI FOOTBOARDS

GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾
50502668, 50502669	Safety Glasses, Torque Wrench, Loctite (blue)	

(1) Tightening to torque value or other moderate tools and techniques required

KIT CONTENTS

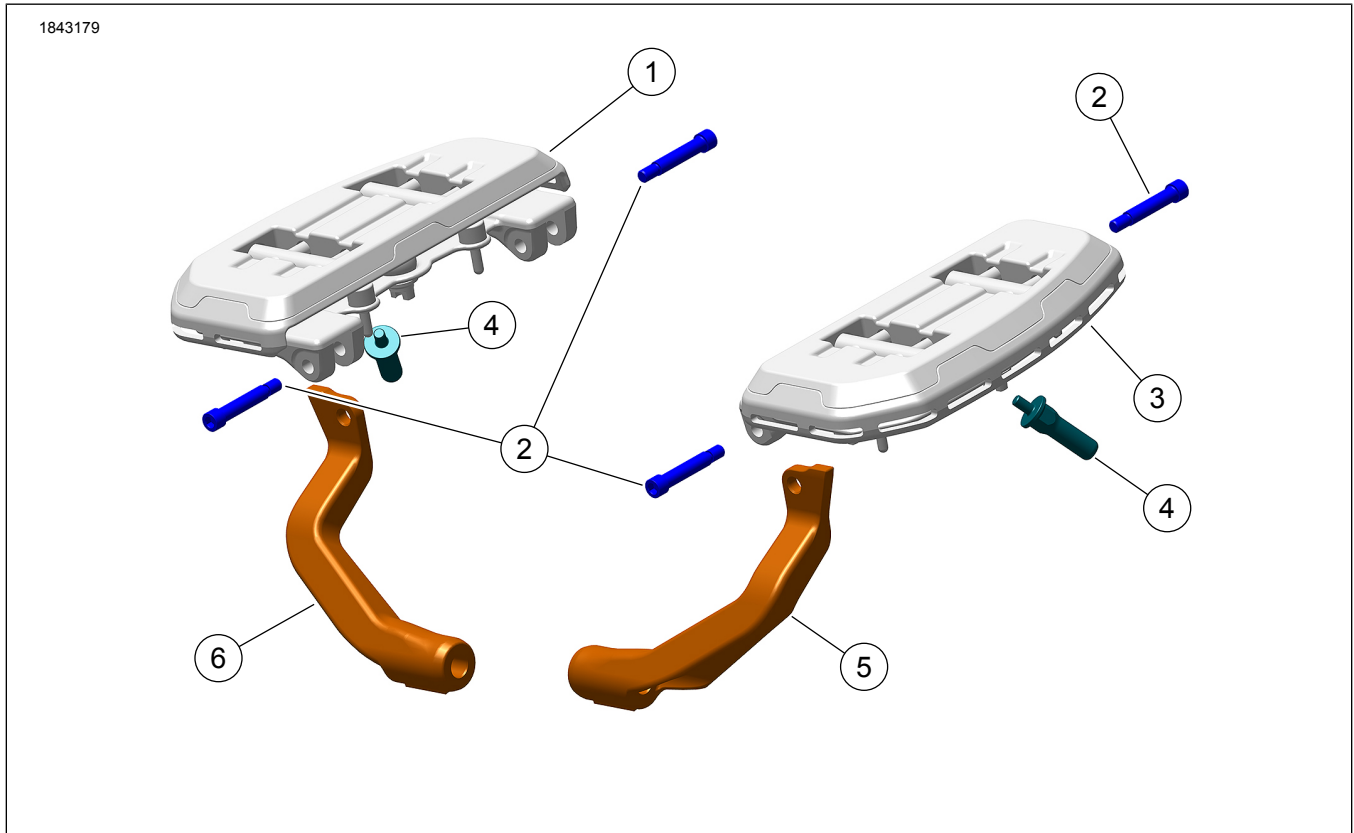


Figure 1. Kit Contents: Footboard

Table 2. Kit Contents: Footboard Kit

<input checked="" type="checkbox"/>	Verify that all contents are present in the kit before installing or removing items from vehicle.				
Item	Qty	Description	Part No.	Notes	
<input type="checkbox"/>	1	Footboard, right	50502666 (Silver) 50502584 (Black)		
<input type="checkbox"/>	2	Shoulder screw	10200986		
<input type="checkbox"/>	3	Footboard, left	50502667 (Silver) 50502583 (Black)		
<input type="checkbox"/>	4	Wear peg	33130-07A		
<input type="checkbox"/>	5	Footboard bracket, left	50502591		
<input type="checkbox"/>	6	Footboard bracket, right	50502582		

GENERAL

Models

For model fitment information, see the Parts and Accessories (P&A) Retail Catalog or the Parts and Accessories section of www.harley-davidson.com.

Verify that the most current version of the instruction sheet is used. It is available at: h-d.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

▲ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for the year and model motorcycle is required for this installation and is available from:

- A Harley-Davidson dealer.
- H-D Service Information Portal, a subscription-based access available for most 2001 and newer models. For more information see *Frequently ask questions about subscriptions*.

REMOVE

1. See Figure 2. Remove flange locking nuts (3) and shoulder screws (4) from underside of footboard (1, 2). Retain locking nuts.
2. Remove footboard (1, 2) from support brackets (5, 9, 10).
3. Remove socket head screw (7), lockwasher (6) and front supports (5) from both sides. Clean the threads and retain socket head screws.

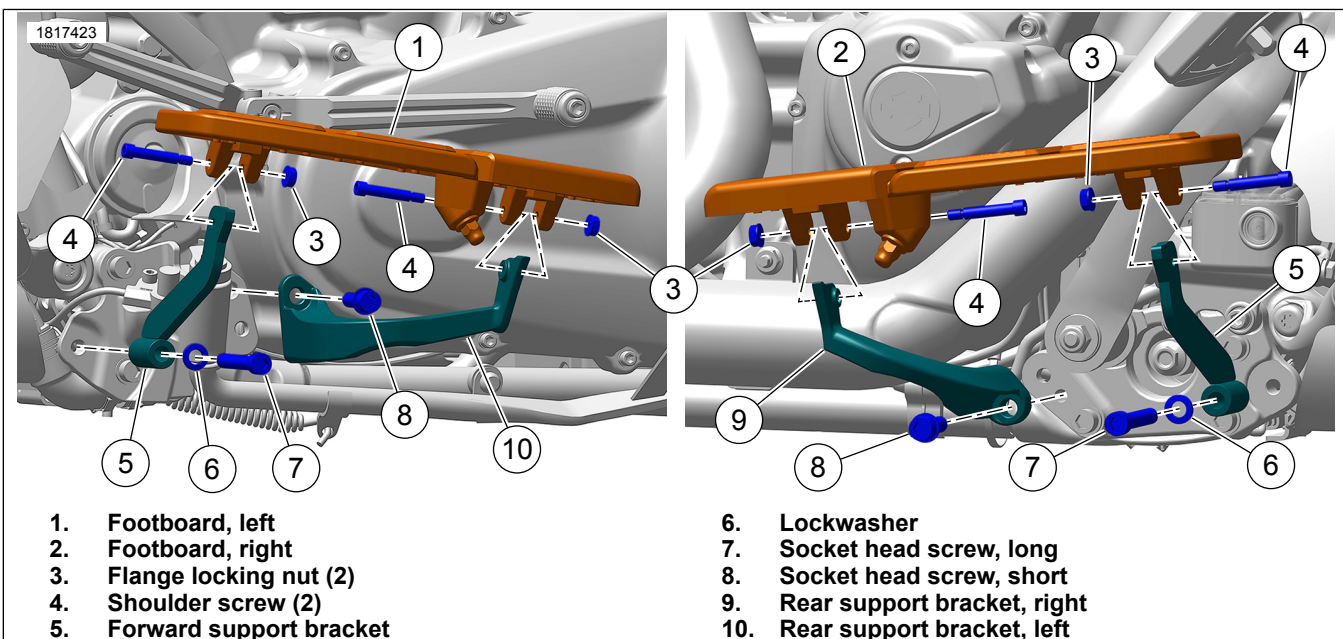


Figure 2. Rider Footboards (quantities shown are for each footboard)

INSTALL

1. See Figure 2. Apply threadlocker to threads of screw (7).
Consumable: LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (BLUE) (99642-97)
2. See Figure 1. Install **new** support brackets (5, 6) from kit.
3. See Figure 2. Install lockwasher (6) and socket head screw (7). Tighten.
Torque: 49–57 N·m (36–42 ft-lbs) *Footboard support bracket screw*
4. See Figure 2. Install left footboard (1) onto Original Equipment (OE) forward brackets (5), shoulder screws (4) and OE flange nuts (3) removed earlier. Tighten.
Torque: 6.8–9 N·m (60–80 **in-lbs**) *Footboard mounting screws*
5. See Figure 2. Install right footboard (2) onto OE forward brackets (5), shoulder screws (4) and OE flange nuts (3) removed earlier. Tighten.
Torque: 6.8–9 N·m (60–80 **in-lbs**) *Footboard mounting screws*

WEAR PEG REPLACEMENT

1. See Figure 3. Remove existing wear peg (2) from footboard.
2. Apply 2 or 3 drops of threadlocker to threads of **new** wear peg (2) and install.
Consumable: LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (BLUE) (99642-97)
3. Tighten wear peg (2).
Torque: 3.4–4.8 N·m (30–42 **in-lbs**) *Wear peg*

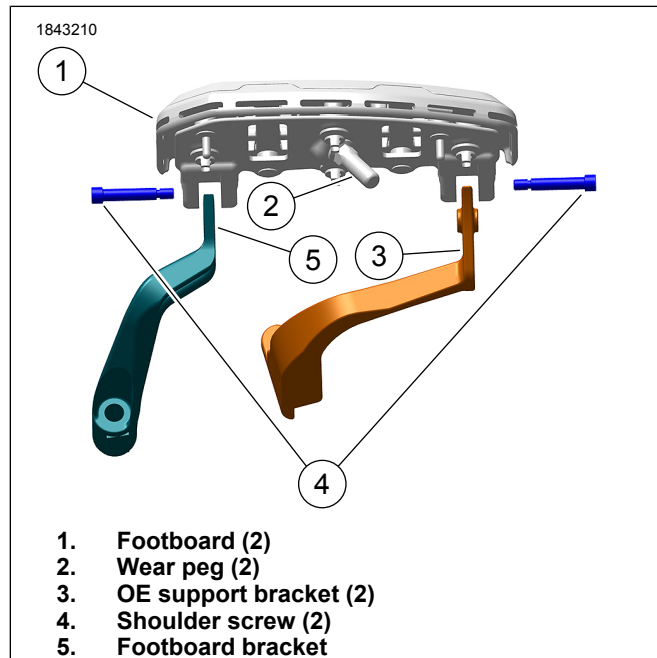


Figure 3. Footboard Assembly