



INSTRUCTIONS

J02831

2024-04-25



RIDER FOOTBOARD KIT

GENERAL INFORMATION

Table 1. General Information

| Kits | Suggested Tools | Skill Level ⁽¹⁾ |
|--|-------------------------------|----------------------------|
| 50631-04, 50500089, 50501801 | Safety Glasses, Torque Wrench | |
| (1) Tightening to torque value or other moderate tools and techniques required | | |

KIT CONTENTS

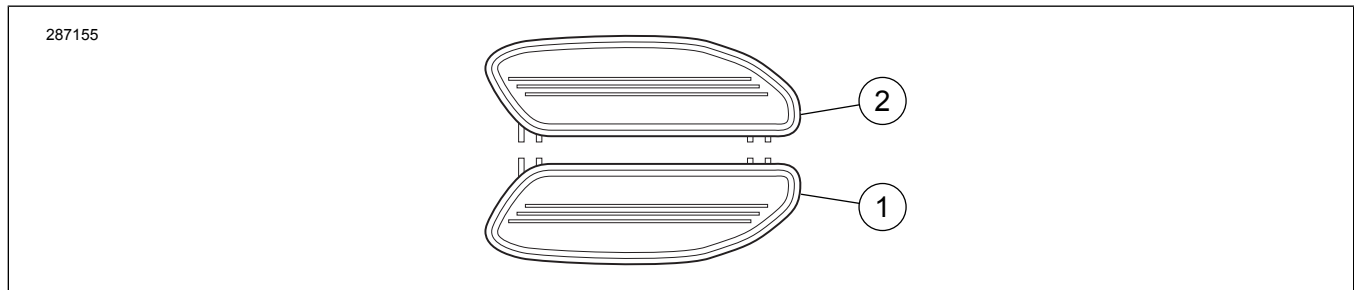


Figure 1. Kit Contents: Rider Footboards Components

Table 2. Kit Contents: Rider Footboards Components

| <input checked="" type="checkbox"/> | Item | Qty | Description | Part No. | Notes |
|-------------------------------------|------|-----|---|---------------------|-------|
| <input type="checkbox"/> | 1 | 1 | Footboard assembly, right | Not sold separately | |
| <input type="checkbox"/> | 2 | 1 | Footboard assembly, left | Not sold separately | |
| <input type="checkbox"/> | 3 | 4 | Shoulder bolt, 1/4-20 x 1-3/32 inch, Kit 50631-04 (Not shown) | 50635-82A | |
| <input type="checkbox"/> | 4 | 4 | Locknut, flanged, 1/4-20, Kit 50631-04 (Not shown) | 7716 | |

NOTE

Verify all contents are present in the kit before installing or removing items from vehicle.

manual for removal of old front supports and install of **new** supports.

This kit is not compatible with Leather Rider Footboard Fringe Kits (50205-97) or (50206-98).

GENERAL

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Verify that the most current version of the instruction sheet is used. It is available at: www.harley-davidson.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

FLTRXSTSE models: Separate purchase of Front Support Mounts (Part No. 47200202A - qty of 2) is required. See service

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

REMOVE

1. Remove two shoulder bolts and locknuts attaching existing footboard to mounting brackets.
2. Remove the footboard.

3. Clean and inspect the footboard brackets. Replace if worn, rusted or damaged.

NOTE

For kit 50500089, use Original Equipment (OE) mounting hardware when installing footboards.

INSTALL

1. Install appropriate footboard (1 or 2) in place over mounting brackets.
2. Line up the holes and install shoulder bolts (3) and locknuts (4). Tighten.
Torque: 9–12 N·m (7–9 ft-lbs)
3. Check that footboard pivots freely.
4. Repeat procedure for opposite side.