



# INSTRUCTIONS

J04550

2010-06-30



## MUFFLER HANGER BRACKET COVER

### GENERAL

#### Kit Number

80716-08, 80812-10

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required

LOCTITE®243 Threadlocker and Sealant - Blue (Part Number 99642-97) is required for the proper installation of this kit.

#### ⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

#### Kit Contents

This kit contains two muffler hanger bracket covers.

There are no service parts available with this kit.


### INSTALLATION

1. Refer to the owner's manual and remove saddlebag from one side of the motorcycle.
2. See Figure 1. Remove two screws and lockwashers (1) attaching the muffler hanger bracket (2) to the muffler (3).

#### NOTE


*If the muffler does not move sufficiently with light pressure, refer to the appropriate service manual and loosen or remove muffler.*

3. See Figure 2. Press down on muffler with light pressure and, from the side, install cover between the hanger bracket of the saddlebag support and the muffler.
4. Clean the two screws previously removed and apply small amount of Loctite 243 (blue) to the threads. Install the two screws and lockwashers (1). Tighten screws to 10.8–16.3 N·m (96–144 in-lbs).
5. Refer to the owner's manual and install the saddlebag.
6. Repeat procedure for opposite side of motorcycle.

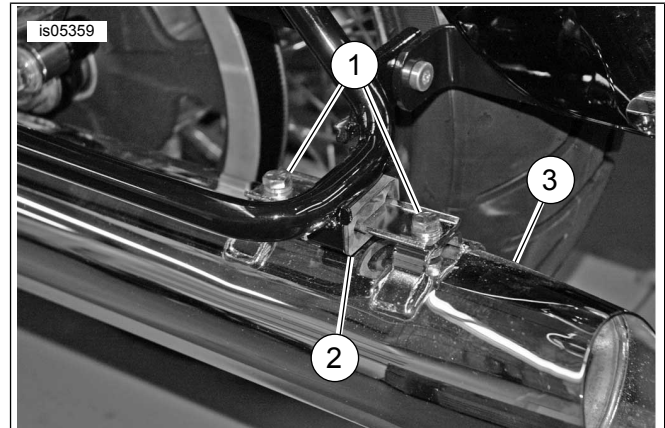

1. Screw and Lockwasher (2)
2. Muffler Hanger Bracket
3. Muffler

Figure 1. Saddlebag Support and Muffler Hanger Bracket

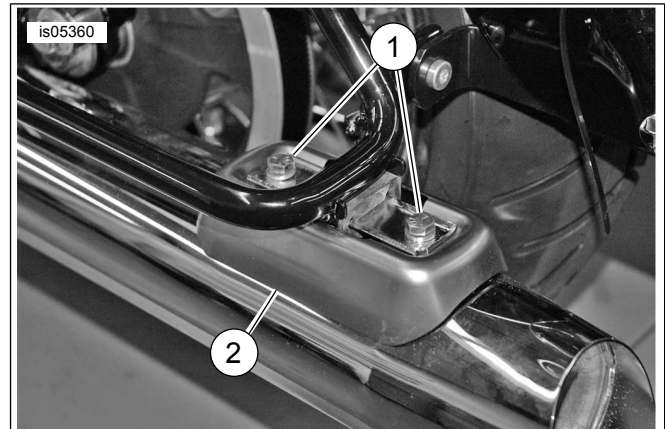

1. Screw and lockwasher (2)
2. Muffler hanger bracket cover

Figure 2. Install Muffler Hanger Bracket Cover

