



INSTRUCTIONS

J06277

2016-01-26



MESSENGER BAG

GENERAL

Kit Number

93300099, 93300100, 93300101

Installation Requirements

Separate purchase and installation of additional parts or accessories may be required for proper installation of this kit on your model motorcycle. See the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only) for a list of required parts or accessories for your model.

A sissy bar upright and backrest pad are required for proper installation of luggage bags. A luggage rack is required when mounting luggage **behind** the passenger upright.

Kit Contents

- Messenger bag
- Shoulder strap (Service kit part no. 93300102 (black only))

INSTALLATION

Harley-Davidson Motor Company cannot test and make specific recommendations concerning every accessory or combination of accessories sold. Use the following guidelines when equipping a motorcycle or carrying passengers and cargo.

⚠ WARNING

See **ACCESSORIES AND CARGO** section within the **SAFETY FIRST** section in your owner's manual. Improper cargo loading or accessory installation can cause component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00021c)

- The bag **MUST** be installed over the passenger upright and backrest pad.
- When installed on a luggage rack, do not exceed the load limit of the luggage rack.
- When installed on a passenger pillion, do not exceed 4.5 kg (10 lb) total weight of bag, contents and attachments.
- Secure the bag straps to the rack or passenger upright to prevent bag shifting during motorcycle operation.
- Verify that all straps are secured to prevent strap contact with the rear wheel during motorcycle operation.
- See the owner's manual for recommended tire inflation pressure.

⚠ WARNING

Do not exceed the motorcycle's Gross Vehicle Weight Rating (GVWR) or Gross Axle Weight Rating (GAWR). Exceeding these weight ratings can lead to component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00016f)

- GVRW is the sum of the weight of the motorcycle, accessories and the maximum weight of the motorcycle, accessories, and the maximum weight of the rider, passenger and cargo that can be safely carried.
- GAWR is the maximum amount of weight that can be safely carried on one axle.
- See information label on frame steering head or frame downtube for GVWR and GAWR.

Wearing Messenger Bag While Riding

1. See Figure 1. Pull the messenger bag shoulder strap (1) over the head and one shoulder, so that the bag rests on the rider's back.
2. Adjust the shoulder strap length for comfort.
3. Connect the stabilizer strap (2) to a D-ring at the bottom of the messenger bag. Then, connect the stabilizer strap to the shoulder strap (1) to reduce bag movement while riding.

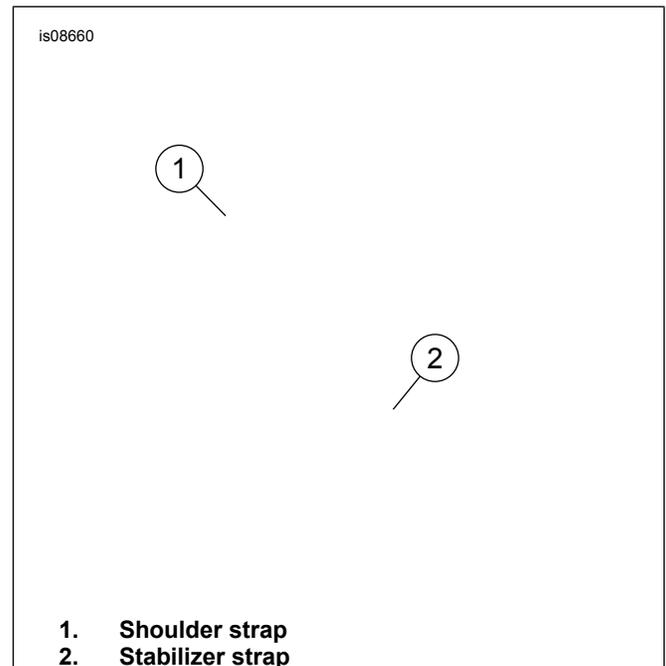


Figure 1. Shoulder Strap and Stabilizer Strap



Mounting Messenger Bag on Passenger Pillion or Luggage Rack

NOTE

A luggage rack is required when mounting luggage **behind** the passenger upright.

1. See Figure 1. Remove the shoulder strap (1) and stabilizer strap (2) to prevent contact with the rear wheel or painted surfaces.
2. See Figure 2. Slide the hook and loop mounting strap (1) on the bag over the passenger upright and backrest pad (2). The hook and loop mounting strap can be opened and adjusted for a proper fit.
3. Wrap the locking straps (3) at the bottom of the bag around the passenger upright tubes. Connect the buckle halves as shown, then pull the straps tight to secure the bag to the motorcycle.
4. Check that the bag is securely fastened to the motorcycle.
5. Secure any excess locking strap material using the hook and loop tabs to prevent contact with the rear wheel or painted surfaces.

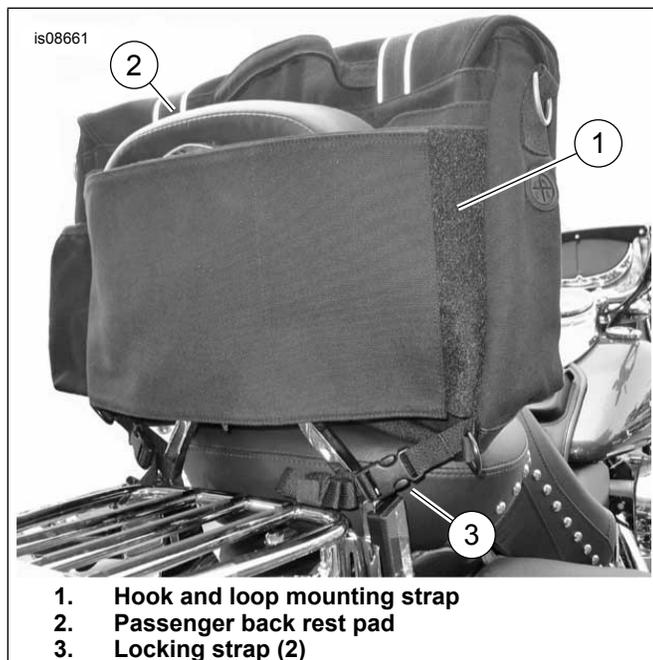


Figure 2. Passenger Upright Mounted Messenger Bag