# **INSTRUCTIONS**



94100283

2023-01-

# **ADVERSARY MIRRORS**

## **GENERAL INFORMATION**

**Table 1. General Information** 

Kits	Suggested Tools	Skill Level <sup>(1)</sup>				
56000279, 56000280	Safety Glasses, Torque Wrench	FFF				
(1) Tightening to torque value or other moderate tools and techniques required						

## **KIT CONTENTS**

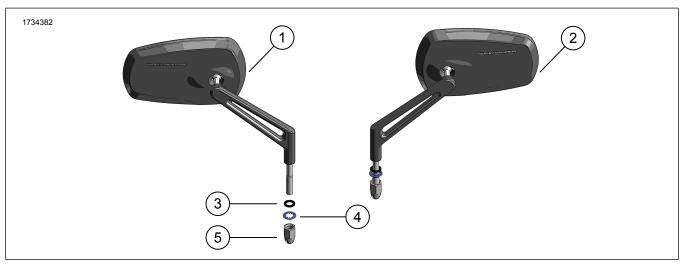


Figure 1. Kit Contents: Mirror Kits

**Table 2. Kit Contents: Mirror Kits** 

	Verify that all contents are present in the kit before installing or removing items from vehicle.					
	Item	Qty	Description	Part No.	Notes	
	1	1	Mirror, right, grey	56000289		
		'	Mirror, right, black	56000288		
	2	2 1	Mirror, left, grey	56000291		
			Mirror, left, black	56000290		
		3 2	Washer, Kit 5600279	6771A		
			Washer, Kit 5600280	12404		
	4	4	2	Lockwasher, Kit 5600279	7127	
			Lockwasher, Kit 5600280	7155		
	5	5 2	Acorn nut, chrome	7331		
			Acorn nut, black	7352		

### **GENERAL**

## Models

For model fitment information, see the Parts and Accessories (P&A) Retail Catalog or the Parts and Accessories section of www.harley-davidson.com.

Verify that the most current version of the instruction sheet is used. It is available at: h-d.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

## **Installation Requirements**

### **A WARNING**

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

## **REMOVE**

- 1. XG Models:
  - Figure 2 Remove mirror (1).
  - b. Remove tube nut (3).
  - c. Remove mirror mount (4).
- 2. All Other Models:
  - a. Figure 2 Remove mirror and hardware. Discard.

#### **INSTALL**

- 1. XG Models: Install mirror.
  - a. Figure 2 Install mirror mount (4). Tighten.

Torque: 11.7-14.3 N·m (104-127 in-lbs)

- b. Install tube nut (3) to mirror stem (2). Hand tighten.
- Install mirror and tube nut to mirror mount. Hand tighten.
- d. Adjust mirror (1).
- e. Tighten tube nut (3).

Torque: 11.7-14.3 N·m (104-127 in-lbs)

- 2. All Other Models: Install mirror.
  - Figure 1 Install flat washer (3) on mirror stud (top position) all mirrors except Part No's. 91696-05A, 92398-09 and 92410-09.
- Vehicles with turn signals mounted to underside of hand lever housings (except 2004-later XL models): Secure left side mirror using only lockwasher (3) and acorn nut (3) from kit.

- 4. Secure right side mirror with lockwasher (4) and acorn nut (5) from kit and turn signal retainer only.
- Vehicles with turn signals mounted away from hand lever housings: Insert mirror studs into holes in hand lever housings.
  - Secure mirrors with flat washers (3) in top and bottom positions, lockwashers (4) and acorn nuts (5) from kit.
- 6. Adjust mirrors for proper field of vision and tighten.
  - Check adjustment and reposition if necessary.
  - b. Tighten acorn nut (5).

Torque: 13.5-18.9 N·m (10-14 ft-lbs)

#### NOTE

Harley-Davidson Motor Company cannot test and make specific fitment recommendations concerning every possible mirror and handlebar combination. Therefore, after installing **new** mirrors or handlebars and before operating vehicle, check that mirrors provide operator a clear view to the rear.

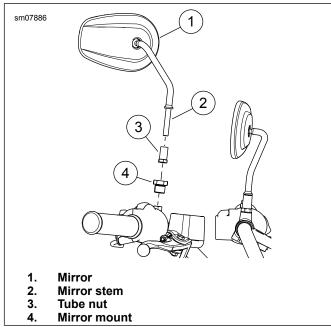


Figure 2. Mirror

2/2 94100283