



# INSTRUCTIONS

94100170


2022-02-22



## CONSOLE COVER KIT

### GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level <sup>(1)</sup>
52300409	Safety glasses, grease pencil, isopropyl alcohol	 1 Dark wrench
<i>(1) Only simple tools and techniques required</i>		

### KIT CONTENTS

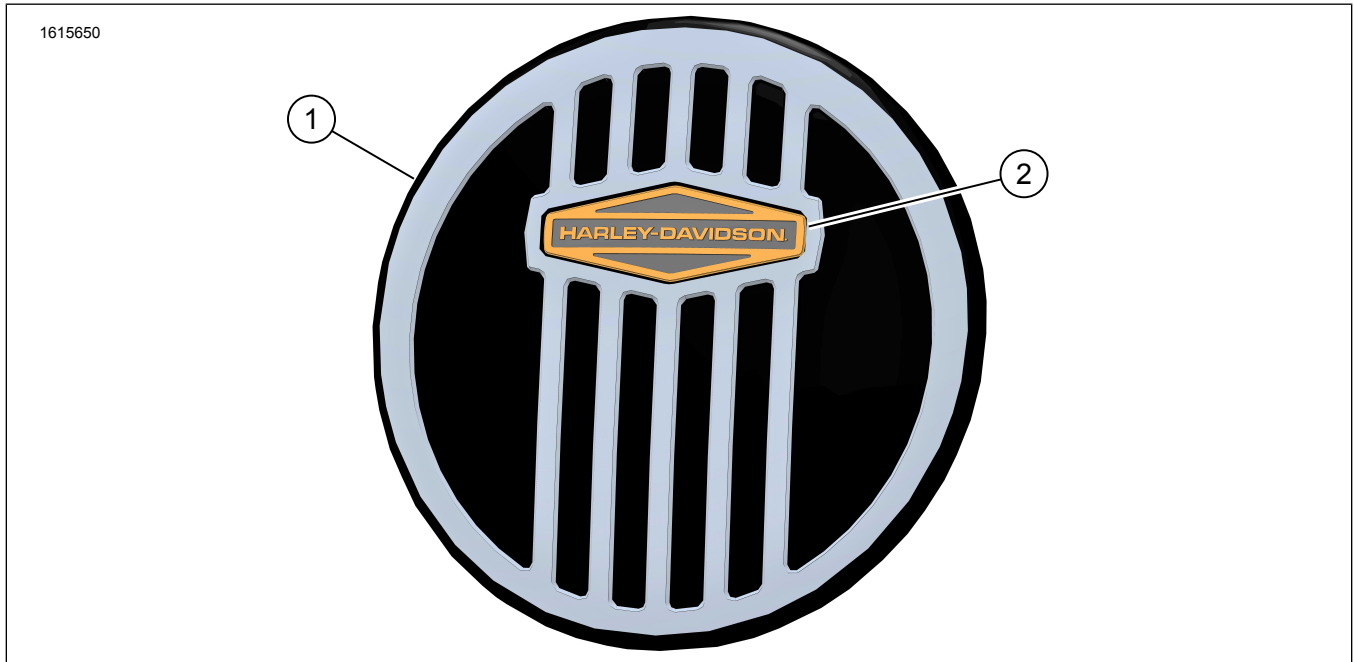


Figure 1. Kit Contents: Console Cover Kit

Table 2. Kit Contents: Console Cover Kit

<input checked="" type="checkbox"/>	Verify that all contents are present in the kit before installing or removing items from vehicle.				
	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1	1	Console cover	Not sold separately	
<input type="checkbox"/>	2	1	Medallion	Not sold separately	

### GENERAL

#### Models

For model fitment information, see the Parts and Accessories (P&A) Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com).

Verify that the most current version of the instruction sheet is used. It is available at: [h-d.com/isheets](http://h-d.com/isheets)

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

### Installation Requirements

#### ⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

## PREPARE

1. Figure 1 Bond medallion (2) to console cover (1).
  - a. Medallion should be evenly spaced.
2. Figure 2 Test fit console cover (3).
3. Clean console (2) area with isopropyl alcohol. Dry with a lint free cloth.
4. Use a grease pencil to mark location.

## INSTALL

- Ambient temperature during installation must be at least 68° F (20° C).
  - Installation at temperatures below 68° F (20° C) will cause failure of the adhesive bond.
  - Do not sand or scuff surface where inserts are to be installed.
  - After installing, allow a minimum of 24 hours before exposing the area to vigorous washing, strong water spray or extreme weather.
1. Figure 2 Remove adhesive backing from console cover (3).
  2. Install console cover (3) using marks made earlier as a guide.
  3. Press firmly in place with steady pressure for one minute.

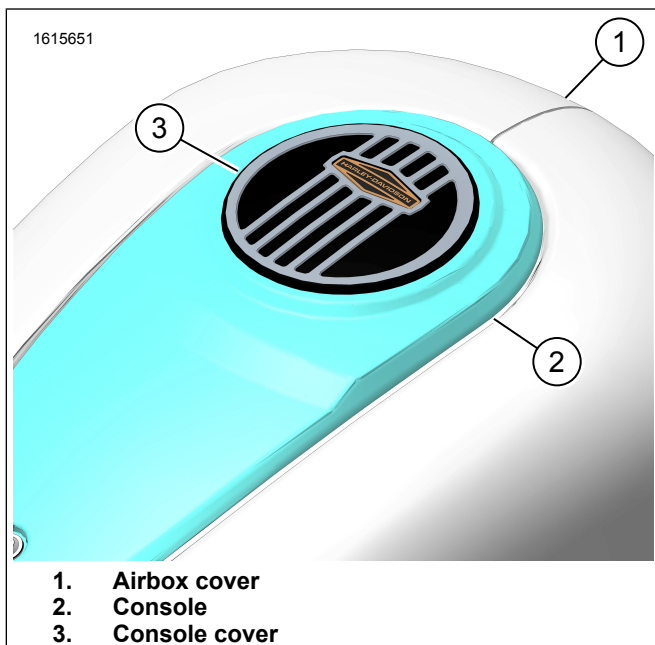


Figure 2. Console Trim Installed