# **INSTRUCTIONS**

2012-11-05

J05652

# AIR WING BACKREST PAD KIT

# **GENERAL**

### Kit Number

52300302

#### Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

This backrest pad is designed to be used with Air Wing Detachable Uprights (Kit No. 52300146 or 52300147).

#### Kit Contents

See Figure 1 and Table 1.

# **INSTALLATION**

- See Figure 1. Remove the two screws (C) holding the chrome filler plate (B) or optional center light to the sissy bar upright (A).
- Position the backrest pad (1) against the upright. Indentations in the back surface of the pad will aid in proper alignment to the upright tubes.

#### NOTE

To avoid misalignment and cross threading of screws, start all three screws into the backrest before tightening any.

- 3. Install the 1/4-20 screw (2) through the upper hole in the upright and into the upper hole in the backrest pad, but do not tighten.
- Slide a washer (3) over the threads of the two #10 screws. Install the screws through the upright cross bar (D) and into the lower holes in the backrest pad, but do not tighten.
- 5. With the backrest aligned squarely on the upright, alternately tighten the three screws to 0.79–1.13 N⋅m (7–10 in-lbs).
- Install the chrome filler plate (B) to the sissy bar upright
  (A) with the two screws (C) removed earlier. Tighten the
  screws securely. Models with optional center light: Install
  the light to the sissy bar upright (A) per the instructions in
  the light kit.

# **SERVICE PARTS**

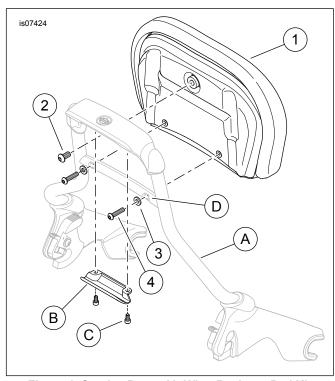


Figure 1. Service Parts, Air Wing Backrest Pad Kit

**Table 1. Service Parts** 

Item	Description (Quantity)	Part Number
1	Backrest pad, Air Wing	Not sold separately
2	Screw, button head,	10500038
	1/4-20 x 12.7 mm (1/2 in) long	
	Washer, narrow, #10 (2)	10300053
4	Screw, button head (2),	10200230
	#10-24 x 22.2 mm (7/8 in) long	
Items mentioned in text, but not included in kit.		
	Sissy bar upright, Air Wing	
	Chrome filler plate or optional light	
С	Retaining screw (2)	
D	Cross bar	