

# INSTRUCTIONS

2011-08-15

### REAR ROAD WINDER WHEELS

### **GENERAL**

### **A WARNING**

J05452

Install only wheels and installation kits approved for your model motorcycle. Contact a Harley-Davidson dealer to verify fitment. Mismatching wheels and installation kits or installing wheels not approved for your model can cause loss of control, which could result in death or serious injury. (00610c)

### Kit Number

40900071, 40900074

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

#### Kit Contents

These kits include the custom wheel only.

See Figure 1 and Service Parts Tables.

### Additional Parts Required

Proper installation of this kit requires the separate purchase of tire 44006-09.

Proper installation of these kits require the separate purchase of the following parts which are available at a Harley-Davidson dealer.

- Wheel Installation Kit (See Table 3 and Table 4 to determine required installation kit.)
- Brake Disc Screws (See Table 1 to determine proper hardware.)
- · Wheel Bearing Remover and Installer (94134-09A)

The following Harley-Davidson Genuine Motor Accessories are recommended for proper maintenance and cleaning:

- Harley<sup>®</sup> Bright<sup>™</sup> Chrome Cleaner (94683-99)
- Harley<sup>®</sup> Glaze<sup>™</sup> Polish and Sealant (99701-84)
- Harley<sup>®</sup> Wheel and Spoke Brush (43078-99)
- Harley-Davidson<sup>®</sup> Wheel and Tire Cleaner (94658-98)
- Harley<sup>®</sup> Preserve Bare Aluminum Protectant (99845-07)

#### **A WARNING**

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

#### NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson dealer.

**Table 1. Rear Disc and Sprocket Hardware Fitment** 

Hardware	Fitment							
Rear Disc Screws (select stock								
5 Stock disc screws (43567-92)	All models							
Chrome screw kit (46647-05) in-	All models							
cludes 5 screws								
Rear Sprocket Screws (select s	stock or chrome hardware)							
5 Sprocket screw, stock (3109)	2007 and later Dyna and							
	Softail, 2007 Touring							
,	2007 and later Dyna and							
cludes 5 screws and washers	Softail							
5 Sprocket screw, stock (3737A)	2000-2005 Dyna, 2000-							
	2006 Softail, 2004-2006							
	Touring							
Chrome screw kit (94773-00A)	2000-2005 Dyna, 2000-							
includes 5 screws and washers	2006 Softail							
5 Sprocket screw, stock (3814)	2008 Touring							
5 Sprocket screw, stock (3873)	2006 Dyna							
5 Sprocket screw, stock (3899)	2000-2003 Touring, 2001							
	and later Sportster (except							
	Japanese models)							
5 Sprocket screw, stock (40439-	2002-2006 VRSC and 2007							
01)	VRSCR models							
5 Sprocket screw, stock (4552)	2007 and later VRSC mod-							
	els (except VRSCR and							
	VRSCSE models)							
Rear Sprocket Washers								
5 Sprocket washer, stock	2006 and earlier Dyna, Sof-							
(6516HW)	tail and Touring and 2000							
	and later Sportster models							
50 (7000)	(except Japanese models)							
5 Sprocket washer, stock (7039)	2002 and later VRSC							

### **INSTALLATION**

 Remove existing rear wheel assembly. Save axle, axle nut, brake disc and wheel spacers for kit installation. Refer to the service manual.

#### NOTE

Prior to removing or installing the wheel, the rear brake caliper must be removed.

The cotter pin or spring clip for the axle nut must be replaced. They are available for purchase from a dealer. See a dealer for the correct part number.

#### NOTE

Install short valve stem (43157-83A) included in the installation kit. Discard all other valve stems.

See Figure 1. Install valve stem assembly (H) on wheel. Refer to the service manual.

#### **NOTICE**

Do not re-use brake disc/rotor screws. Re-using these screws can result in torque loss and damage to brake components. (00319c)

Assemble wheel installation kit components, stock brake disc and sprocket to wheel using the appropriate service parts table. Refer to the service manual.

#### NOTE

Install the primary bearing first using appropriate service manual and WHEEL BEARING REMOVER/INSTALLER.

The machined grooves in the hub face indicate the primary bearing side.

The bearing shims provided in the installation kit is not required for this wheel kit and can be discarded.

 Install rear wheel (1), stock axle and stock spacers to motorcycle. Refer to REAR WHEEL in service manual.

### MAINTENANCE AND CLEANING

Chrome parts must be maintained regularly to keep their original shine and luster.

- Clean heavily-soiled wheel surfaces using Harley-Davidson Wheel and Tire Cleaner, applied with Harley Wheel and Spoke Brush.
- 2. Thoroughly clean chrome with a good quality chrome cleaner, such as Harley Bright Chrome Cleaner.
- 3. After cleaning and polishing, seal the finish with a good quality sealer, such as Harley Glaze Polish and Sealant.

### **SERVICE PARTS**

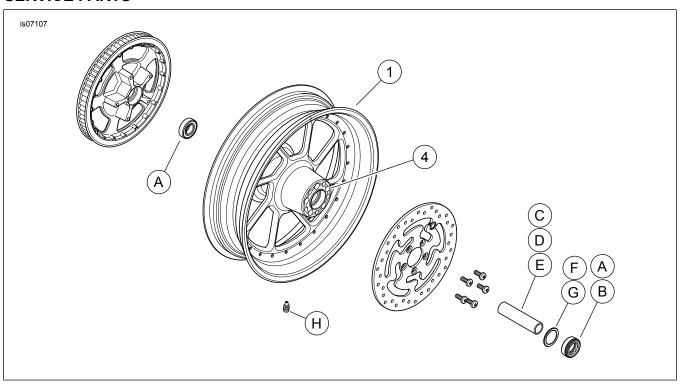


Figure 1. Service Parts: Rear Road Winder Wheels

Table 2. Service Parts and Wheel Kit Contents

Kit	Item	Description (Quantity)	Part Number				
40900071, 40900074	1	Wheel	Not Sold Separately				
	Visual indicator mentioned in text:						
	4	Machined groove (all wheels)					

2/3 J05452

## Table 3. REAR 25mm Bearing Wheel Installation Kit (41456-08C)

REAR 25 MM Bearing Wheel Installation Kit (41456-08C)			Item (Quantity Used and Description)								
Fitment	Wheel Size	Α	С	D	E	F	Н	I	J		
2009 and later FLT without ABS	16 x 5.0 in	2	1	0	0	0	*	*	*		
2009 and later FLT without ABS	18 x 5.0 in	2	1	0	0	0	*	*	0		
2008 VRSCD without ABS	18 x 5.5 in	2	0	0	1	**	*	*	0		
2008 and later FXCW and FXCWC without ABS	18 x 8.0 in	2	0	1	0	0	*	*	0		
2008 and later VRSCAW, VRSCDX and VRSCF without ABS	18 x 8.0 in	2	0	0	1	**	*	*	0		
Installation kits are designed to work with many different wheel styles and fitments. Contact a Harley-Davidson dealer to verify that the wheel and installation kits are both designed and approved for the motorcycle they are being installed on.		Α	Beari	ng, reg	9276						
		С	Axle sleeve					41349-07			
		D	Axle sleeve					41358-08			
		Е	Axle sleeve					43704-08			
NOTES:		F	Bearing shim***					41447-08			
* See <i>NOTE</i> above valve installation step in INSTALLATION to determine		Н	Valve stem, short					43157-83A			
which valve stem to use for your particular kit. Discard other valve stem(s).		ı	Valve stem, long					43206-01			
** See INSTALLATION to determine if shim is required.  *** Bearing shim installed under primary bearing.		J	Valve stem, pull thru					40999-87			

### Table 4. REAR 25 MM Bearing ABS Wheel Installation Kit (41453-08C)

REAR 25 MM Bearing ABS Wheel Installation Kit (41453-08C)			Item (Quantity Used and Description)									
Fitment	Wheel Size	Α	В	Ċ	D	E	F	G	H	ΓÍΤ	J	
2008 FLT with ABS	16 x 3.0 in	1	1	0	1	0	0	1	*	*	0	
2009 and later FLT with ABS	16 x 5.0 in	1	1	1	0	0	0	0	*	*	*	
2009 and later FLT with ABS	18 x 5.0 in	1	1	1	0	0	0	0	*	*	0	
2008 VRSCDa with ABS	18 x 5.5 in	1	1	0	0	1	**	0	*	*	0	
2008 and later VRSCAWa, VRSCDXa, VRSCXa and VRSCFa with ABS	18 x 8.0 in	1	1	0	0	1	**	0	*	*	0	
Installation kits are designed to work with many different wheel styles			Bearing, regular							9276		
and fitments. Contact a Harley-Davidson dealer to verify that the wheel		В	Bearing, ABS**							9252		
and installation kits are both designed and approved for the motorcycle		С	Axle sleeve							41349-07		
they are being installed on.		D	Axle sleeve							41900-08		
NOTES: * See NOTE above valve installation step in INSTALLATION to de-		Ε	Axle sleeve							43704-08		
		F	Bearing shim***							41447-08		
termine which valve stem to use for your particular kit. Discard other		G	Bearing shim***							43904-08		
valve stem(s).		Н	Valve stem, short							43157-		
** Primary bearing. Bearing must be installed with red side facing the										83A		
wheel.		ı	Valve	stem	, long					4320	6-01	
*** Bearing shim installed under primary bearing.		J	Valve stem, pull thru							40999-87		

J05452 3 / 3